


# Instructions:

- \*To read absolute level, push the "0/...Level" button. "Level" will appear in the upper, lefthand corner of the display.*
- \*To measure relative bevel, place the Angle Gauge on a table, push the "Zero" button, then move the gauge to the second surface; the gauge will accurately measure the bevel angle between them.*
- \*To switch back to level measuring, push the "0/...Level" button and hold for about 3 seconds.*
- \*To hold the data, push the "Hold" button. "H" will appear in the upper center of the display. Push the "Hold" button again to release hold.*
- \*If the  signal appears on the LCD or there is no power, remove the back plate and change the battery.*

## Specifications:

- \* Tilt Range: 0 to 90°*
- \* Accuracy:  $\pm 0.2^\circ$*
- \* Resolution:  $0.05^\circ$*
- \* Repeatability:  $0.1^\circ$*
- \* Standard 9-Volt Battery included (approximately 1 year use)*

**Easy! Quick! Accurate!**